
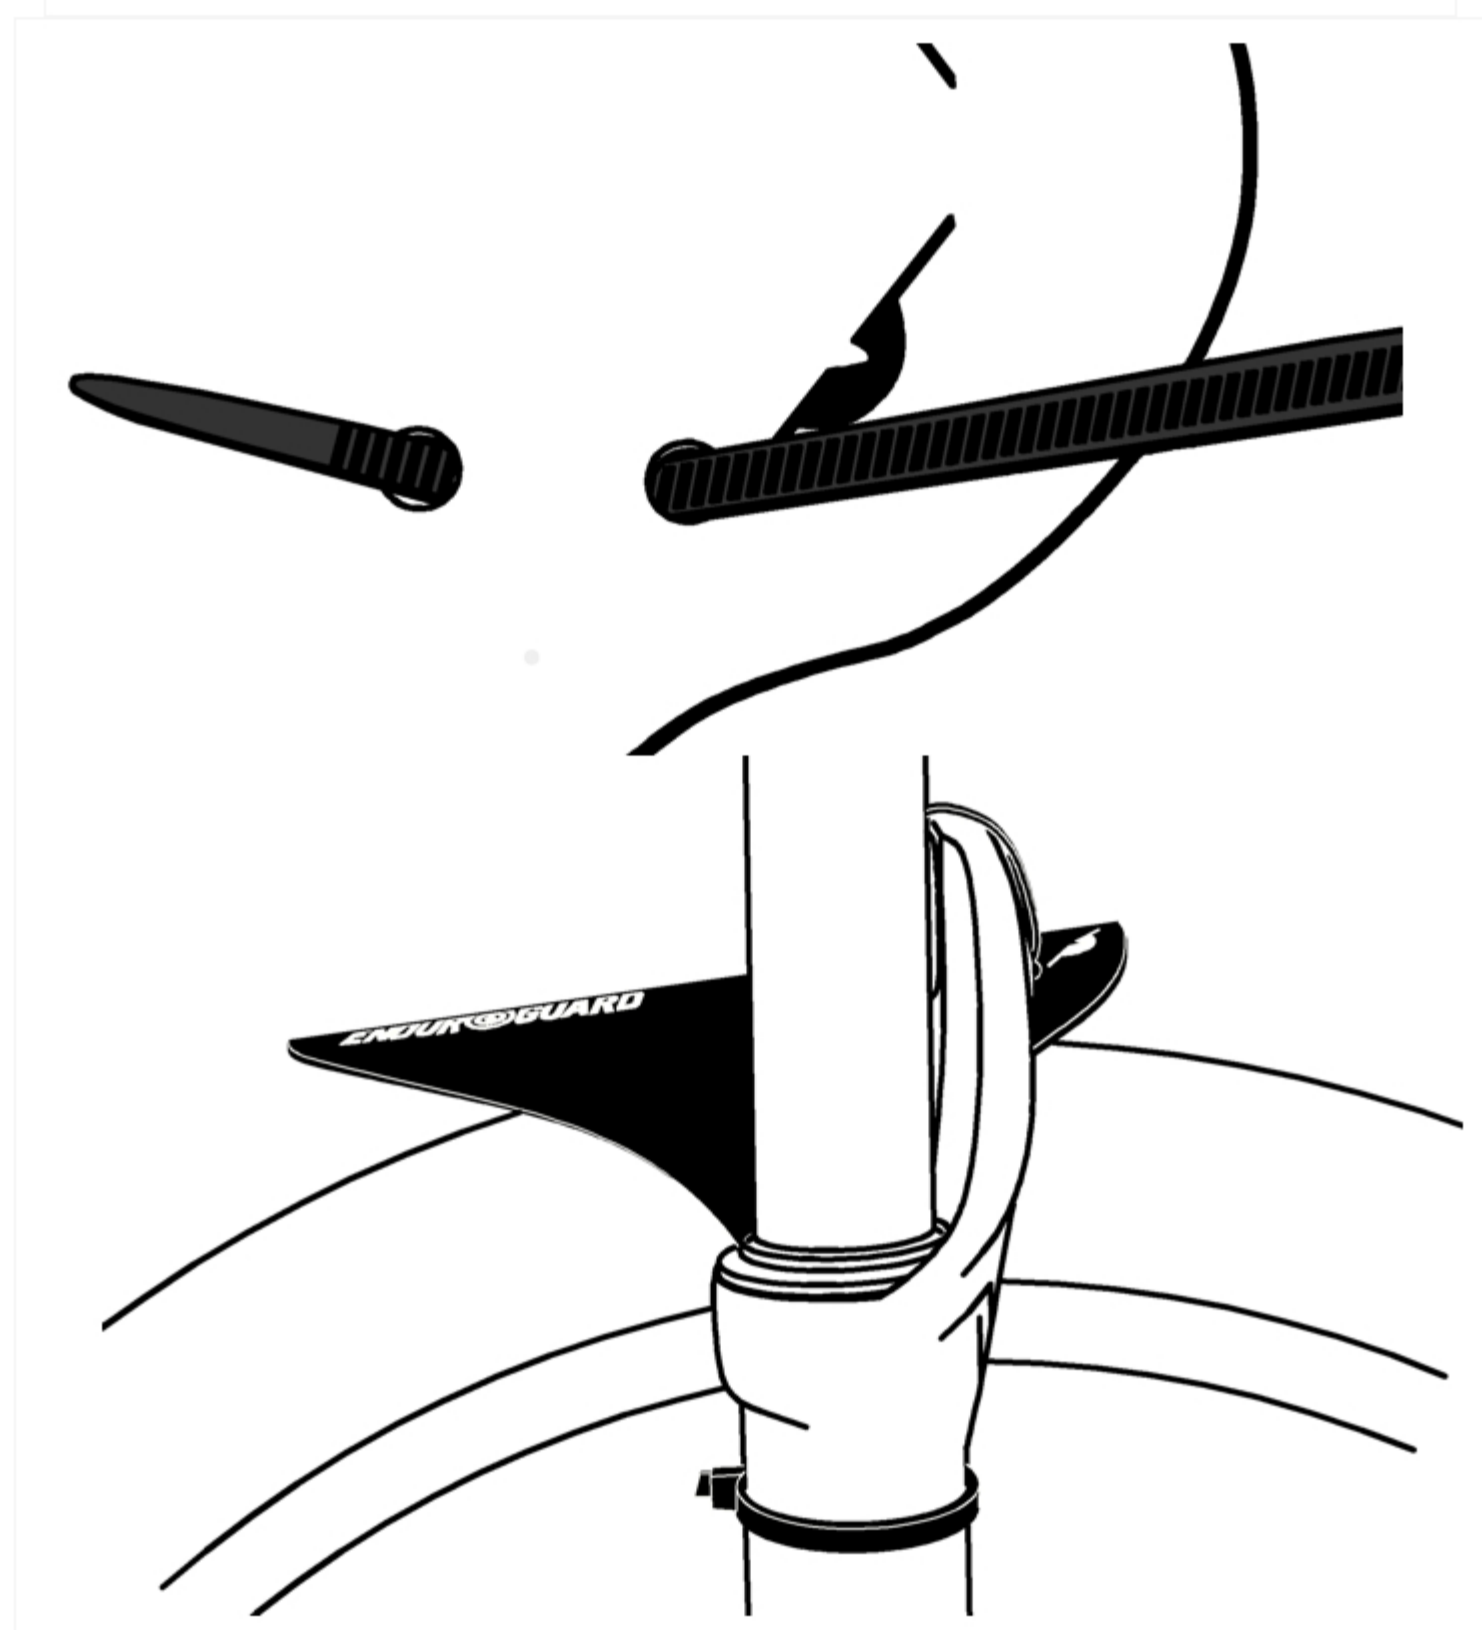


Fitting the EnduroGuard

Front mudguard

1. Remove zip ties and insert them into all the holes as shown below

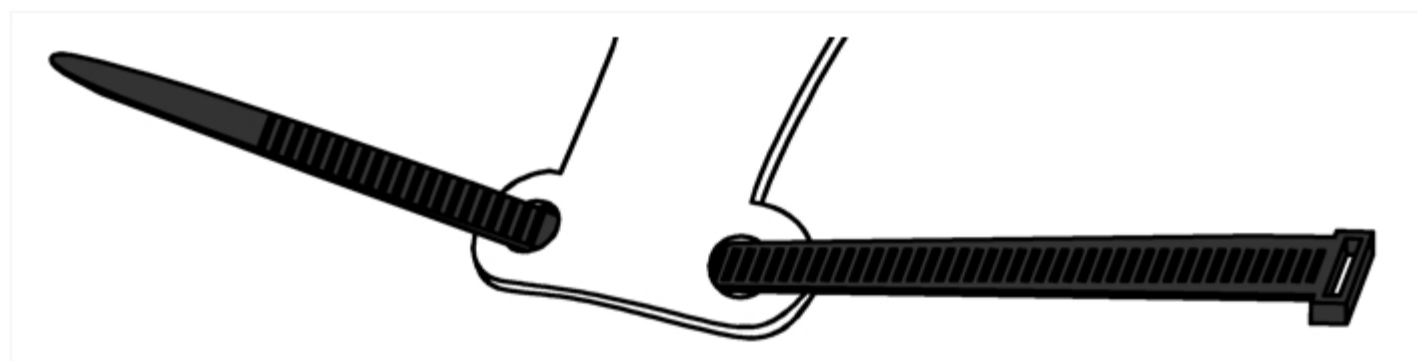


2. Bend and slide the ENDUROGUARD into position from the front

3. Loosely fasten up the top zip ties around the fork brace first then the legs4) Centralise and then tighten up the top zip ties real tight so it won't move

4. Rotate/twist the bottom arms around the legs to raise the back of the guard (ensure the guard doesn't hit the frame when bottoming the fork)

5. Tighten all zip ties and cut off any excess and move them to cover the holes

6. Finally push up the arms to shove the guard up towards the fork brace

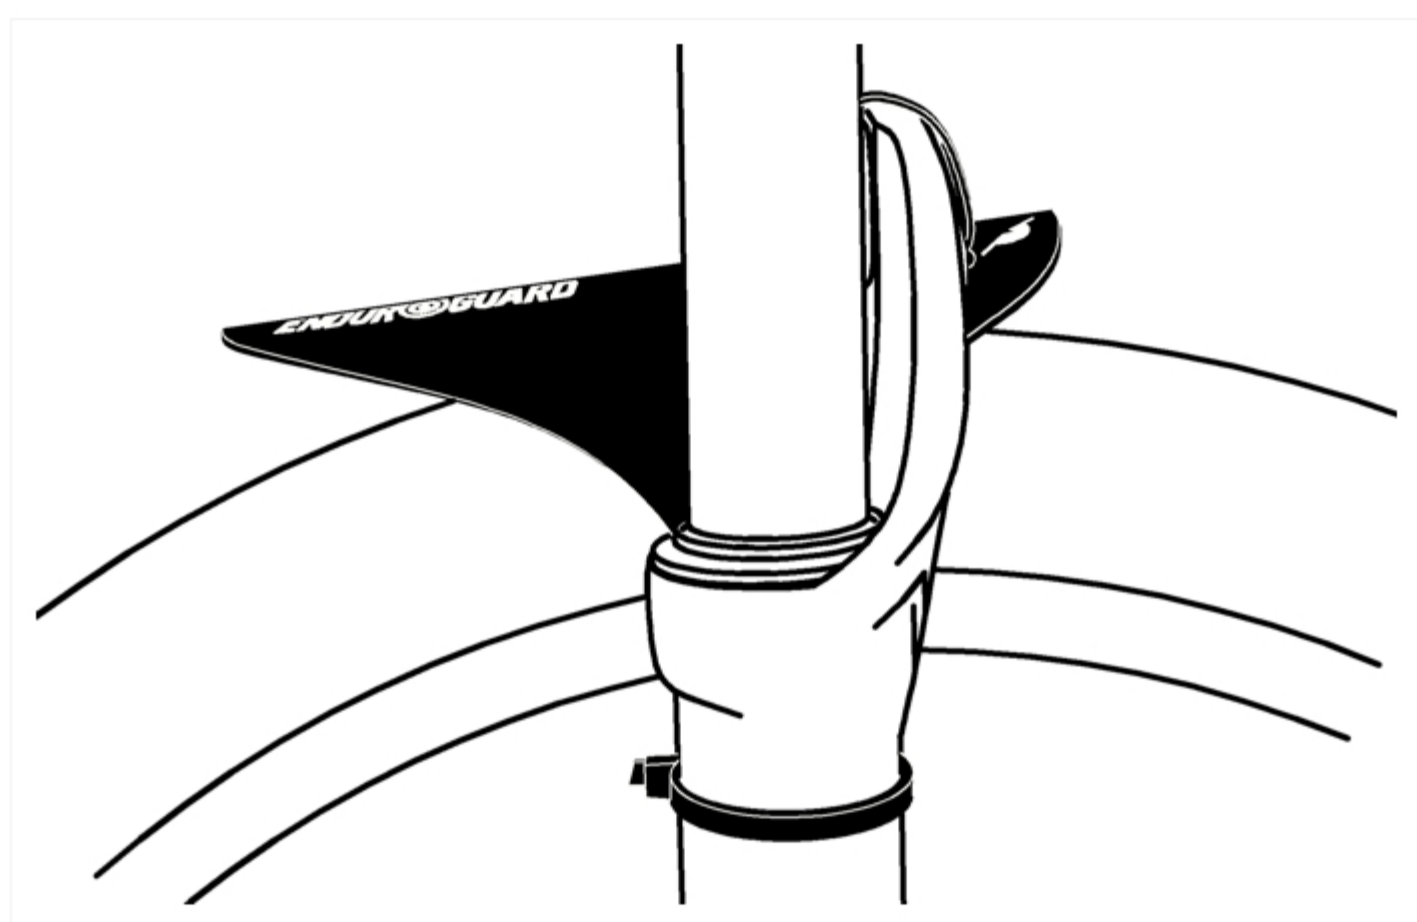

Rear mudguard

1. Remove the snap-off holes either side of the RRP logo if you have a rear brace

2. Loosely attach the zip ties to the rear seatstays and rear brace

3. Align the ENDUROGUARD and do up all the zip ties real tight

